

Digital Ampere Meter

- → Microcontroller based
- → Wide working voltage between P-N, 100v to 300v
- + On site 5A/5A to 1000A ct ratio selection
- → 5A step for ct ratio selection
- → Direct (without ct) use in 5A load by selecting ctr in 5A range
- \star 150% over load capacity
- → Amp range up to 999 Amps.

INSTRUCTION: To set the ct ratio press and hold the button, first ctr will displayed for two seconds, and then the previous setting of ct ratio. Now keep pressing the button the ct ratio will start increasing by steps of 5 amps, momentary releasing and then again pressing the button the ct ratio will start decreasing in steps 5 amps.